

VEHICLE TRACKING SYSTEM SKYTRAK-3000

Limited Lifetime Warranty

This vehicle tracking system is warranted to the original purchaser, to be free from defects in material and workmanship. The manufacturer will repair or replace at its option, and free of charge for the first twelve (12) months, any part that proves defective in material or workmanship under normal installation, use, and service, provided the product is returned to the manufacturer freight prepaid. After the first 12 month warranty period there will be a maximum service charge of \$100.00 per calendar year (if required) for repair and/or replacement of any defective parts.

A copy of the original purchase and installation receipt must accompany any products returned for warranty service. Warranty is limited to defective parts and/or replacement parts only and excludes any incidental, and consequential damages connected therewith.

The manufacturer of this tracking system makes no warranty against the theft of the vehicle or its contents. This warranty is not to be construed as an insurance policy against loss.

WARRANTY OF INSTALLATION LABOR, REMOVAL AND RE-INSTALLATION CHARGES ARE NOT THE RESPONSIBILITY OF THE MANUFACTURER.

PLEASE NOTE:

Some of the features described in this manual may require additional parts and/or labor, and may not be included as part of the standard installation of this unit. Please discuss these features and any questions you may have regarding the installation of this product with Your Authorized Dealer.

Table of Contents

1.	About Your System	age 1
2.	Quick Start Guide	age 2
3.	New Master Account Registration PagePage	age 3
4.	New Vehicle Registration Page	age 4
5.	Billing Information Page	age 5
6.	Sub User Account	age 6
7.	SkyTrak 3000 Login Page	age 7
8.	The Home Page	
9.	Vehicle Alerts	age 9
10.	SkyTrak 3000 Main PagePa	age 10
13.	Landmark Management	age 13
14.	Mounting the skyTrak 3000Pa	age 14
15.	Door Lock Diagrams	ige 15
Wiring	g Diagram	< Page

About Your System

The SkyTrak 3000 is a Vehicle Tracking System

System Features:


- Unlimited Real-time GPS tracking with user-friendly internet software
- Bread Crumb History Trail
- Fast Response Time
- High gain GPS/Cellular antenna
- · Issue commands via internet or web enabled Cell Phone
- Door Lock/Unlock, remote start, starter disable/enable, flash horn
- Notification alerts sent to cell phone and email address
- · Excessive speed , theft daily curfew, geo-fencing, four input triggers
- Engine on /off reports
- · Multi vehicle monitoring
- 5 minutes automatic update

Quick Start Guide for SkyTrak 3000

System Registration:

To Register your SkyTrak 3000

- 1- Login on to www.scytrak.net
- 2- Click on the "Click to register"

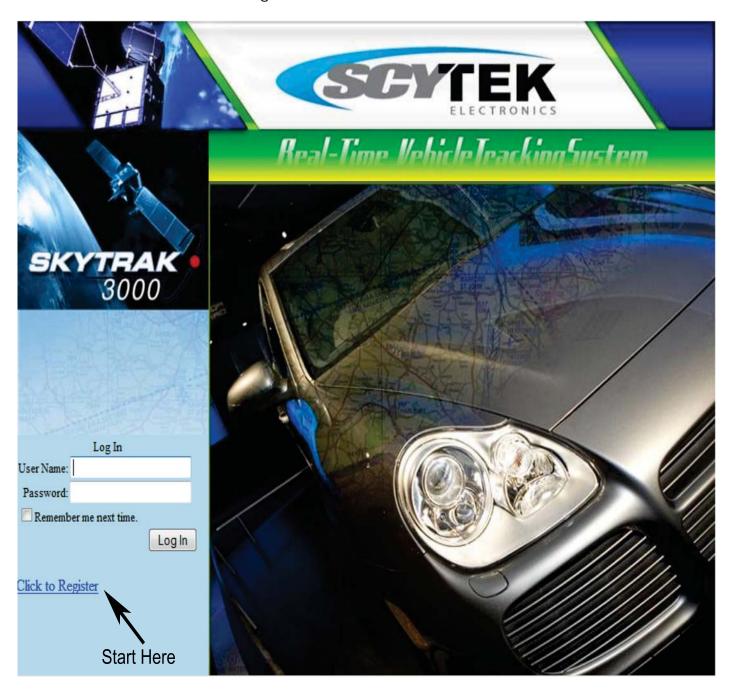


New Master Account Registration Page

New Master Account Registration screen.

In the "User ID" area type in your login ID, then complete the rest of the information.


After completing Master Account registration page, click on "O.K" at the bottom far right side.

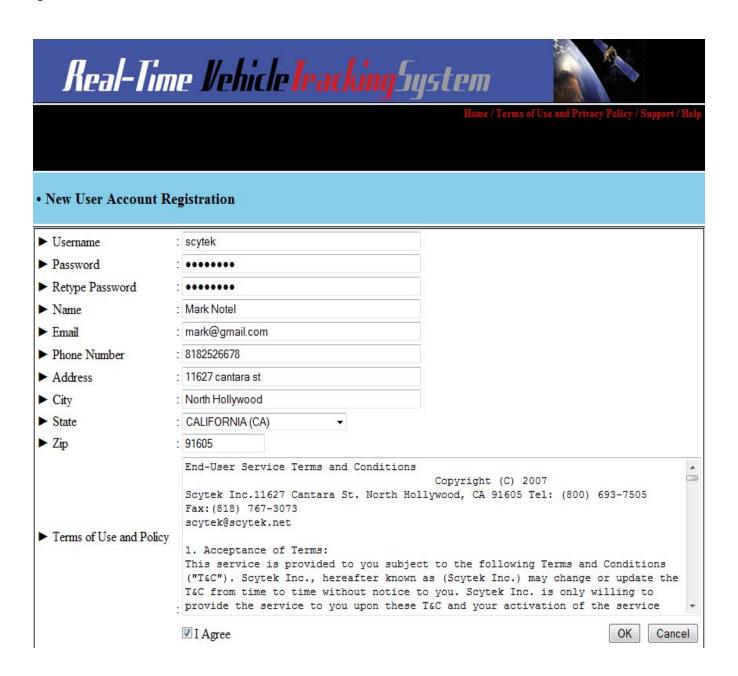

New Vehicle Registration Page

New Vehicle Registration screen


In the "Vehicle's ID " area type in the Vehicle name such as Johny's Car or Vehicl's model, then complete the rest of the information.

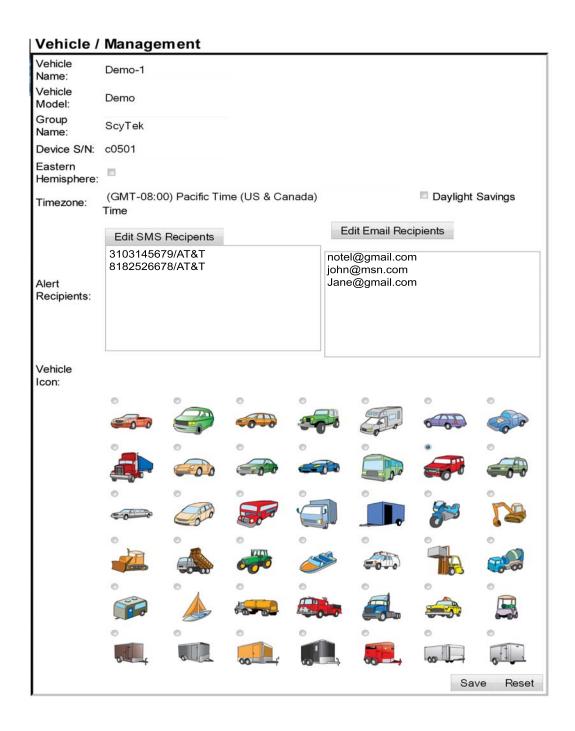

Billing Information Page


Billing information screen.

In the Service Term Area, select the yearly plan that you like. then complete the rest of the information.

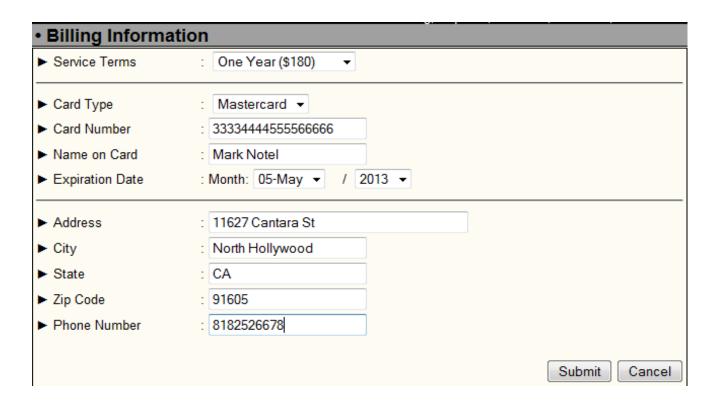


Sub User Account

Subuser account allowes for additional users to manage the fleet vehicles with varies degrees of control.

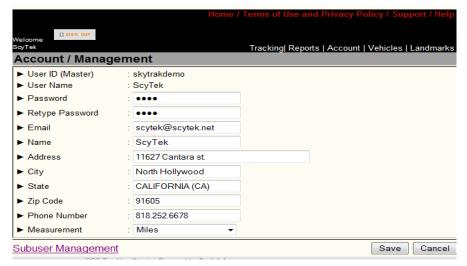

Click on Subuser Management to edit the page.

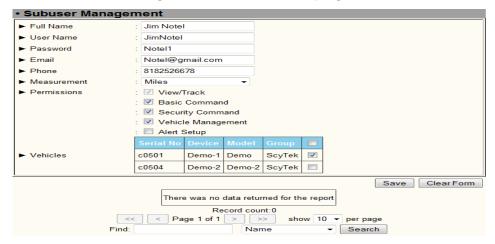

Register the subuser and assign the vehicles and checkmark the desired privilege of the user.

More then one subuser can be assigned to that vehicle group.

SkyTrak 3000 Login Page

login page www.scytrak.net

SKYTRAK 3000 GPS Login Page:

Login: input your Login ID and your Password.

"you may changeyour password at any time for your personal security" Click on the field marked "Sign in" and you will then be taken to your SKYTRAK 3000 GPS Home Page.



The Home Page

Your SKYTRAK 3000 GPS Home Page will have your vehicle(s) listed and look very similar to this.


Click on the Vehicle name to select that particular vehicle, the screen will refresh displaying the map with the breadcrumb trail showing the last locations of the vehicle.



Vehicle Alert Window:

Vehicle alert window is located bellow the map, it contains;

- 1. Number of events displayed on the map Select the number of events on the map by selecting 1,10,40 of 80, recorded events will be displyed showing the state of the vehicle and the direction of the motion.
- 2. Contract expiration date Current state of the subscrption.
- Current alert state alrerts that are enabled are hilighted. Edit the alert selection by clicking on any of Alert buttons.

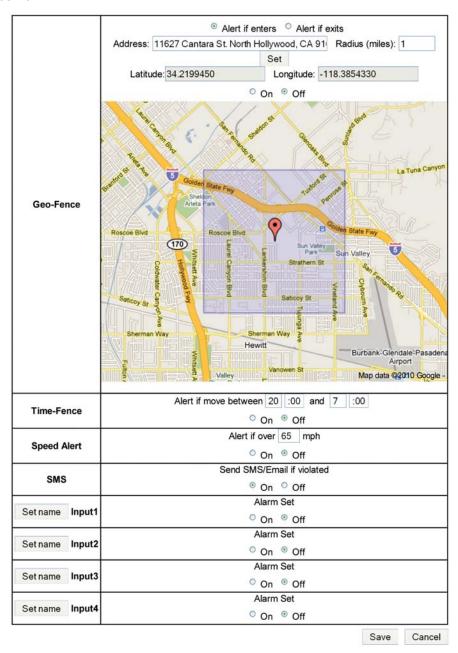

System Alerts

1. Geo Fence Alert setup:

Type in the address of the Geo Fence window and the boundary size, chose if alert is for antry into or exit from the boundaries.

Select the Geo Fence Alert.

2. Time Fence Alert:

Set the time alert window, when alert is on, if the vehicle ignition is turned on within the time window an alert will be set.

3. Speed Alert:

Select the speed threshold, when the alert is set, if the vehicle speed exeeds the set speed Alert is set.

4. SMS Alert:

SMS alert sends all alerts as a text message to the preset SMS and Email addresses specified in the vehicle setup window, note: that multiple Emails and text messages are allowed.

5. Input Alerts:

There are four alert inputs that can be selected.

Inputs 1 2, and 3 are negative (ground).


Input 4 is Positive (12V), this input when the Skytrak system is connected to ScyTek Galaxy Security System is automatically reports an Alarm Alert.

In stand-alone mode an alert will be set only if the input is valid for over 5 seconds. connect this input to the siren of vehicle alarm.

After completion of alert setup, Press the save button on the bottom of the screen to save the setup in the remote unit.

The **Success** responce indicates the unit received the alert setup.

Renaming input alerts

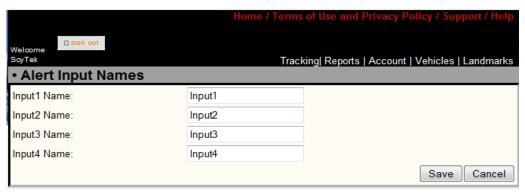


SkyTrak 3000 Main Page

In the main Page provides tracking and control of the vehicles.

View all vehicle locations on the map by checking the Check all box and clicking on the Track Today/Refresh button.

Refresh location manually by clicking on the Track button of the specific vehicle. When sucess result appears the map will refresh automatically and diplay the latest vahicle location.

Select the **auto refresh** mode to refresh the display once a minute automatically, this feature provides a live display of all the selected vehicles.

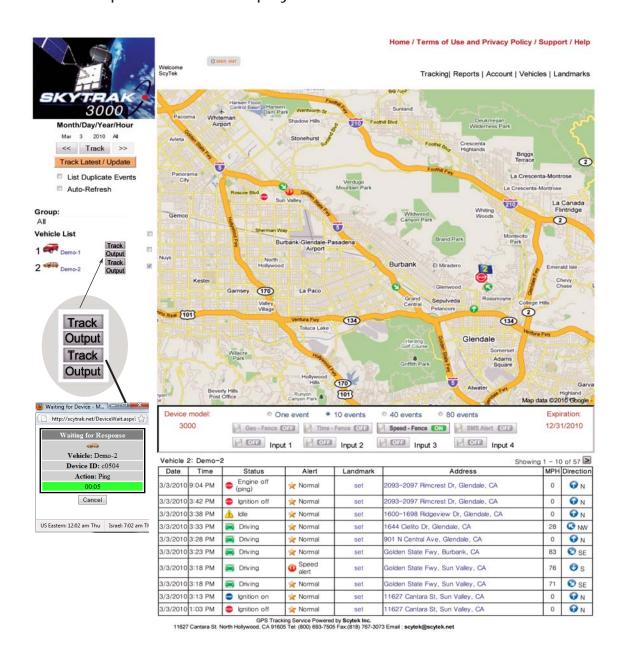

Outputs

SkyTrak system has been provided with four outputs.

The system is designed for stand alone use or with combination of ScyTek Security systems.

Using with combination of ScyTek Security

Output 3 - Arms or Disarms the Security System

Output 4 - Starts or Stops Vehicle Remote Start

Output 1 - Trunk Release

Output 2 - Momentary activation of auxiliary output

Stand Alone Mode:

Output 1 and 2 are momentary, and output 3 and 4 are latched.

Activated each of the outputs by pressing the output button.

Output window will open to reveal the system outputs.



Click on send button to activate ouputs 1 or 2, or **on** or **off** for outputs 3 and 4. state of the outputs 3 and 4 is also displayed.




Landmark Management

From the vehicle history table click on the set button in Landmark column, the landmark window will open up.

Date	Time	Status	Alert	Landmark	Address	MPH	Direction
3/3/2010	9:04 PM	Engine off (ping)	☆ Normal	set	2093-2097 Rimcrest Dr. Glendale, CA	0	₽ N
3/3/2010	3:42 PM	planition off		set	2093-2097 Rimcrest Dr, Glendale, CA	0	€ N
3/3/2010	3:38 PM	⚠ Idle	normal 🙀	set	1600-1698 Ridgeview Dr, Glendale, CA	0	⊕ N
3/3/2010	3:33 PM	Driving		set	1644 Cielito Dr, Glendale, CA	28	WN 📀
3/3/2010	3:28 PM	Driving	normal 🙀	set	901 N Central Ave, Glendale, CA	0	⊕ N
3/3/2010	3:23 PM	Driving	normal 🙀	set	Golden State Fwy, Burbank, CA	83	SE SE
3/3/2010	3:18 PM	Driving	Speed alert	set	Golden State Fwy, Sun Valley, CA	76	Os
3/3/2010	3:18 PM	Driving	★ Normal	set	Golden State Fwy, Sun Valley, CA	71	€ SE
3/3/2010	3:13 PM	Ignition on	☆ Normal	set	11627 Cantara St, Sun Valley, CA	0	₩ N
3/3/2010	1:03 PM	gnition off	√ Normal	set	11627 Cantara St, Sun Valley, CA	0	₽ N


Select the appropriate icon and name the landmark. The icon will appear on the map for easy vehicle location identification.

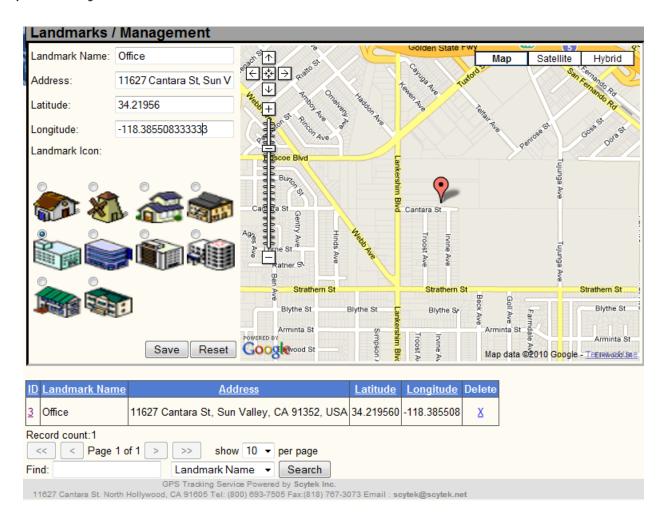

Mounting the skyTrak 3000


The main unit can be mounted under the dashboard. The GSM/GPRS antenna affixes to the windshield with the double sided tape. he GPS Antenna affixes on the dashboard with double sided tape.

The GSM and GPS anttena can be hidden under the dashboard. Note: The GPS antenna if hidden the top side must be faced towards the sky.

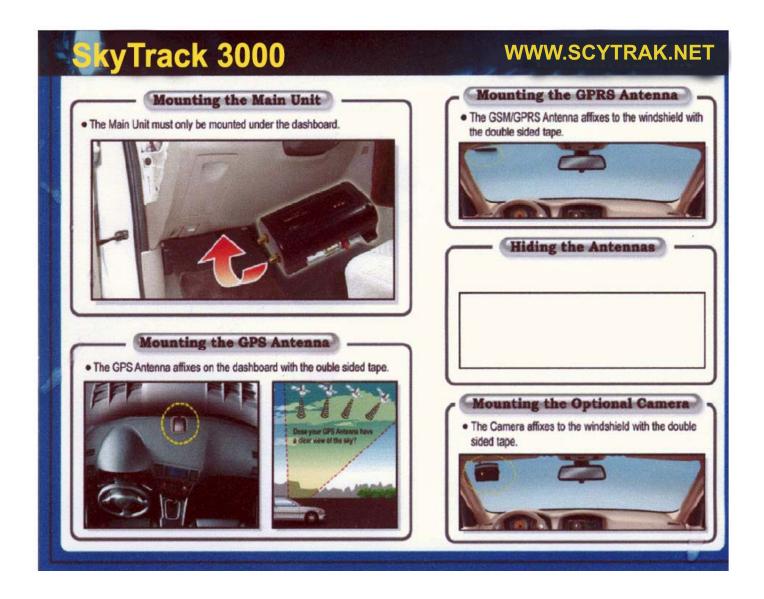


Door Lock Diagrams


Negative Trigger

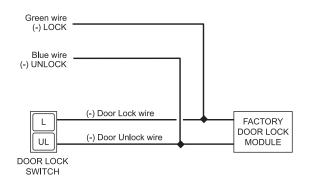


Adding Actuators

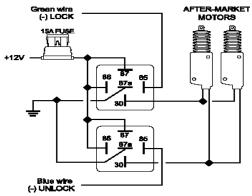

Reverse Polarity

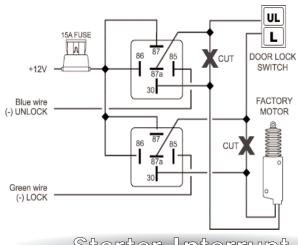


Positive Trigger

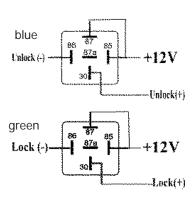


Starter Interrupt

Positive Horn Honk

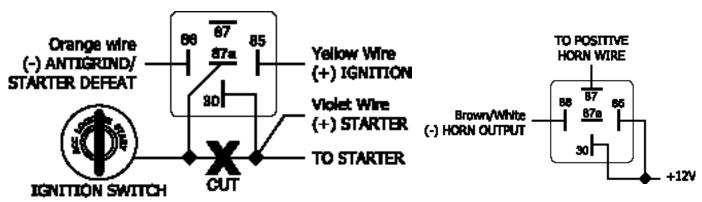

Wiring Diagram

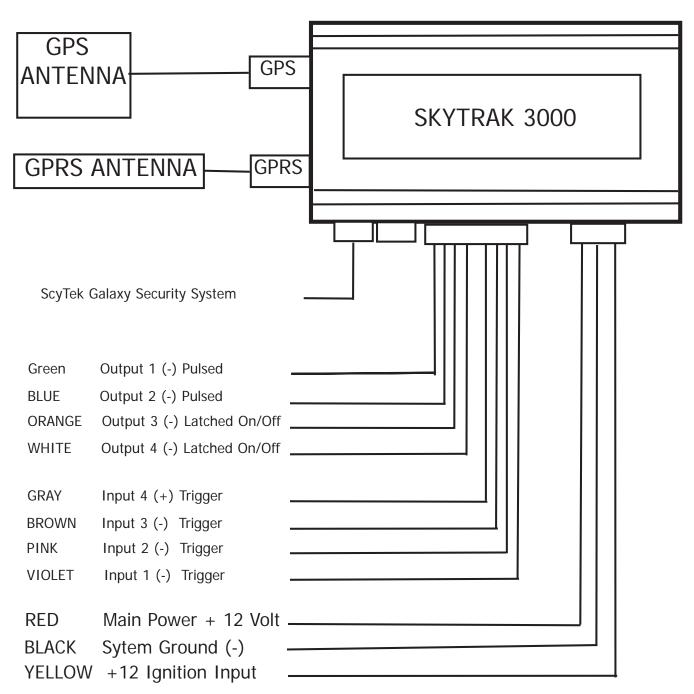

ScyTek Electronics

11627 Cantara Street North Hollywood, CA 91605 www.scytek.net